




WATERPROOFING

SOPRASEAL[®] STICK FLASHPRO HT WALLS



SELF-ADHESIVE AIR AND VAPOUR BARRIER MEMBRANE

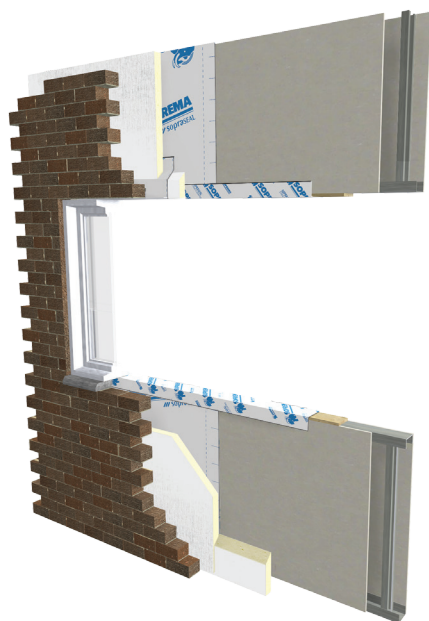

SOPRASEAL STICK FLASHPRO HT is the most versatile flashing tape. Thin and flexible, they can be used as window flashing membrane, but also around openings and at transitions.

- No primer needed for quick installation
- Versatile, as they can be installed on various surfaces, including PVC
- Easy to install with their split-back release film

SURFACE PREPARATION

The surface must be sound and clean. Debris and other detrimental elements, such as water and grease, could compromise the adhesion.

COMPLEMENTARY PRODUCT

NEOPRENE ROLLER

Maximizes adhesion of self-adhesive membranes on walls.

SOPRASEAL STICK FLASHPRO HT

THICKNESS	0.25 mm (10 mil)
DIMENSIONS	100, 150, 225, 300 or 450 mm x 22.9 m (4, 6, 9, 12 or 18 in x 75 ft)
SURFACE	Polyethylene film
UNDERFACE	Split-release silicone paper*

*Except for rolls 100 mm (4 in) wide.



SOPREMA.CA

1 877 MAMMOUTH

INSTALLATION INSTRUCTIONS

1



Prepare and install the gussets at each corner of the opening. Apply pressure using a roller to ensure maximum adhesion.

2



Adhere the bottom section by removing the silicone release film.* Apply pressure using a roller to ensure maximum adhesion.

3



Adhere the side sections* by repeating Step 2 instructions.

4



Adhere the top section* by repeating Step 2 instructions.

5



In case of reverse laps, apply a compatible sealant.

*All overlaps should be at least 50 mm (2 in).

If you have any questions about this product or its installation, please contact your SOPREMA representative.



SOPREMA.CA

1 877 MAMMOUTH