

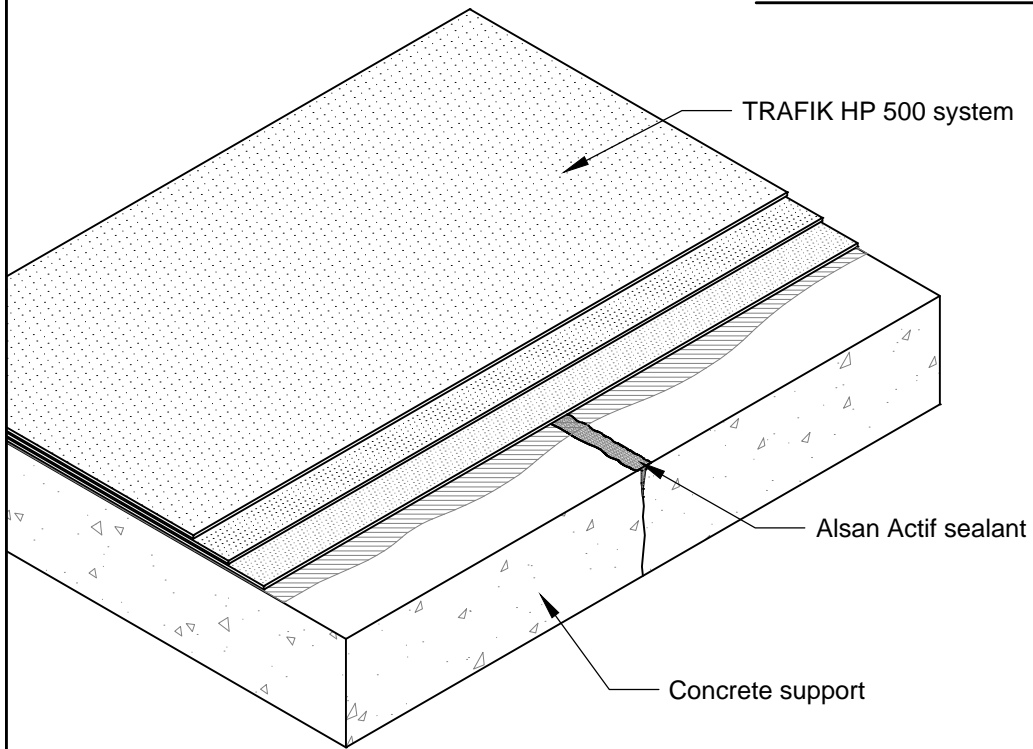


## Crack from 1 to 13 mm ( $\frac{1}{16}$ to $\frac{1}{2}$ ")

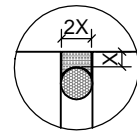

Note: Rout out minimum 6 mm ( $\frac{1}{4}$ ") wide and fill with polyurethane sealant

## Crack from 13 to 25 mm ( $\frac{1}{2}$ to 1")

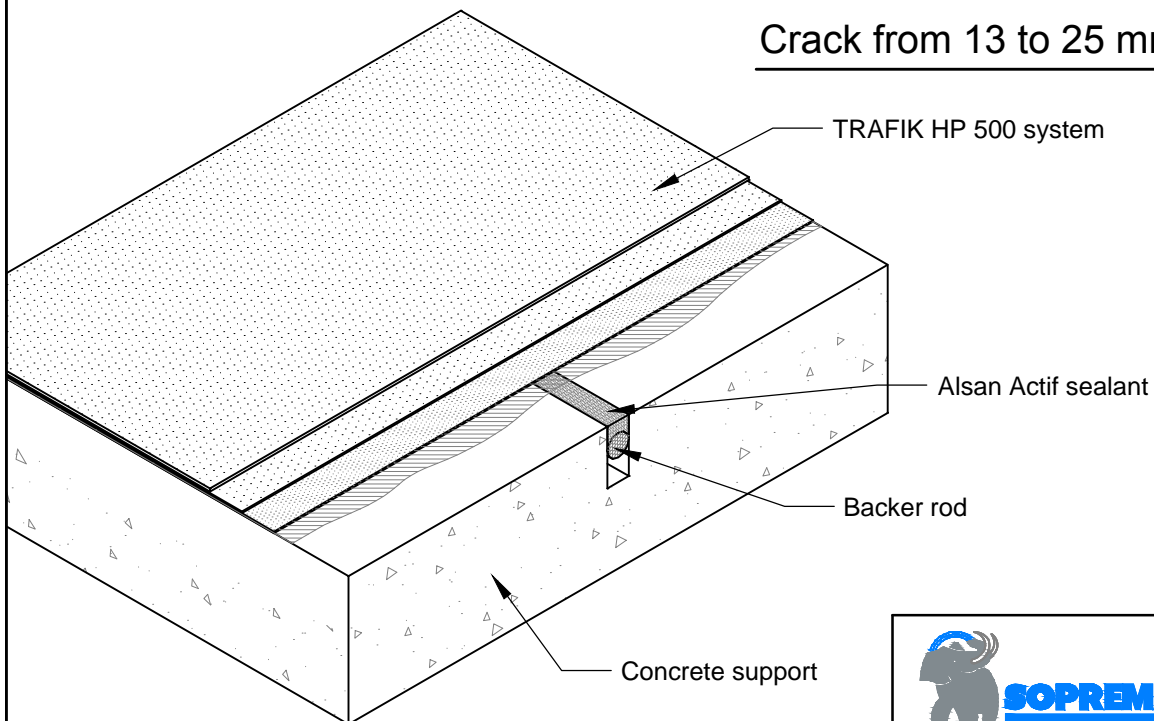

Note: 1. Joint should be designed so that polyurethane sealant has a 2:1 width/depth ratio measured from the top of backer rod.  
2. Do not exceed 13 mm ( $\frac{1}{2}$ ") depth.

COPYRIGHT 2017 SOPREMA



**SOPREMA**

1688, J-B Michaud  
Drummondville, QC J2C 8E9  
WWW.SOPREMA.CA

TITLE: **ALSAN TRAFIK HP 500  
(CRACK PREPARATION)**

PROJECT:

DRAWING NUMBER:

SCALE: N.T.S.

DATE: MAY 2017

TRAFIK-02