



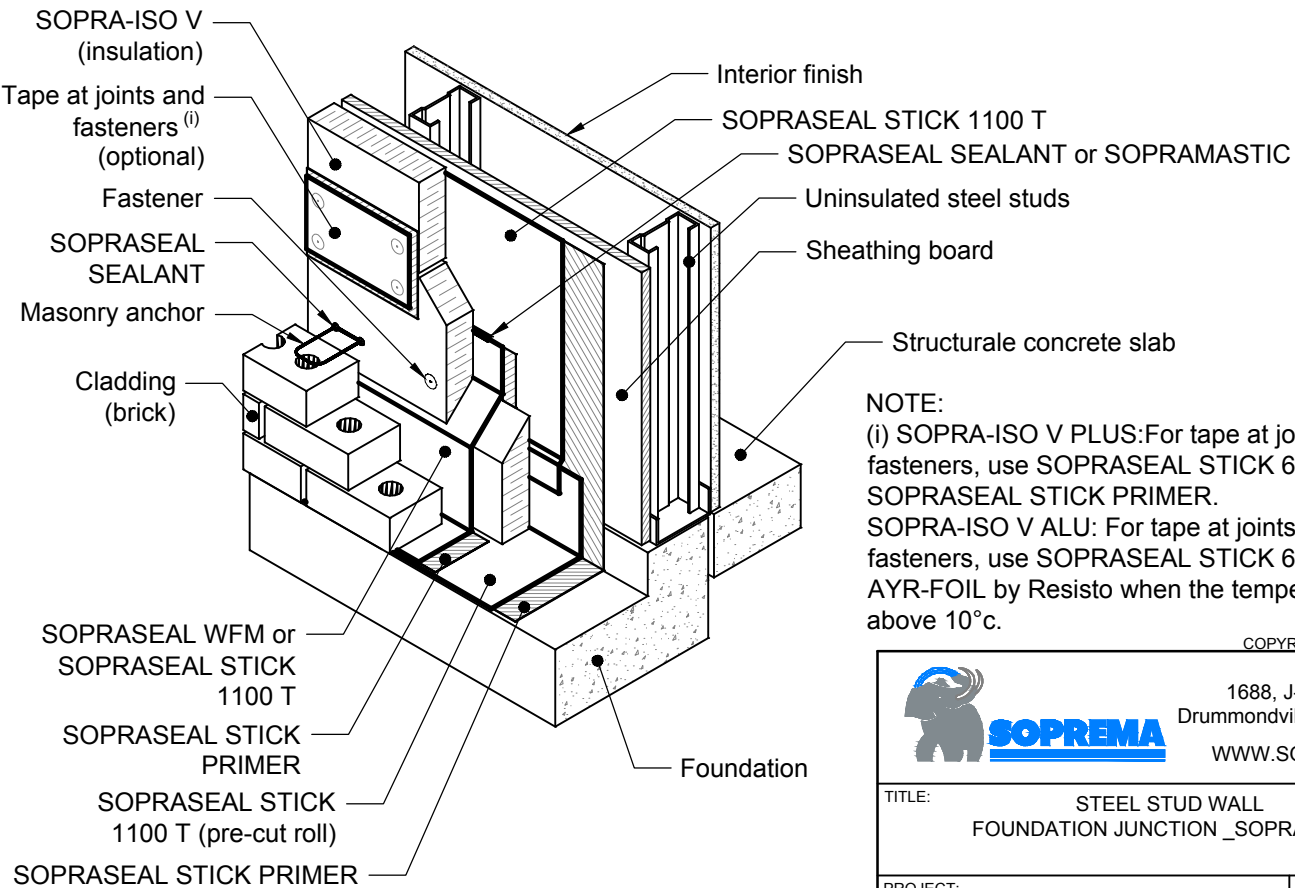

NOTE:

(i) SOPRA-ISO V PLUS: For tape at joints and fasteners, use SOPRASEAL STICK 600 TC with SOPRASEAL STICK PRIMER.
 SOPRA-ISO V ALU: For tape at joints and fasteners, use SOPRASEAL STICK 600 TC or AYR-FOIL by Resisto when the temperature is above 10°C.

COPYRIGHT 2018 SOPREMA

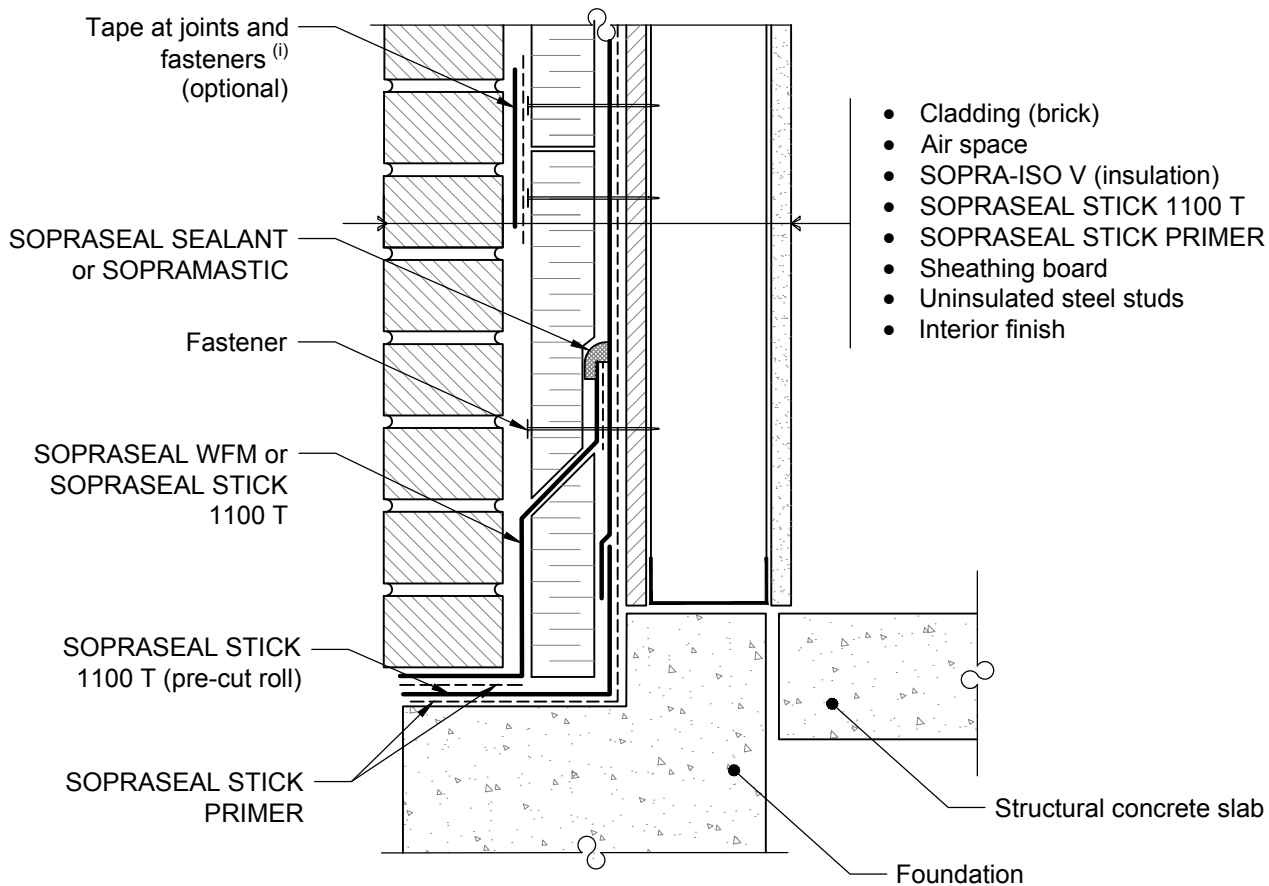

SOPREMA

1688, J-B Michaud
 Drummondville, QC J2C 8E9
 WWW.SOPREMA.CA

TITLE: STEEL STUD WALL
 FOUNDATION JUNCTION _SOPRA ISO V

PROJECT:

DRAWING NUMBER:

SCALE: N.T.S.

DATE: JANUARY 2018

ISOV_03