
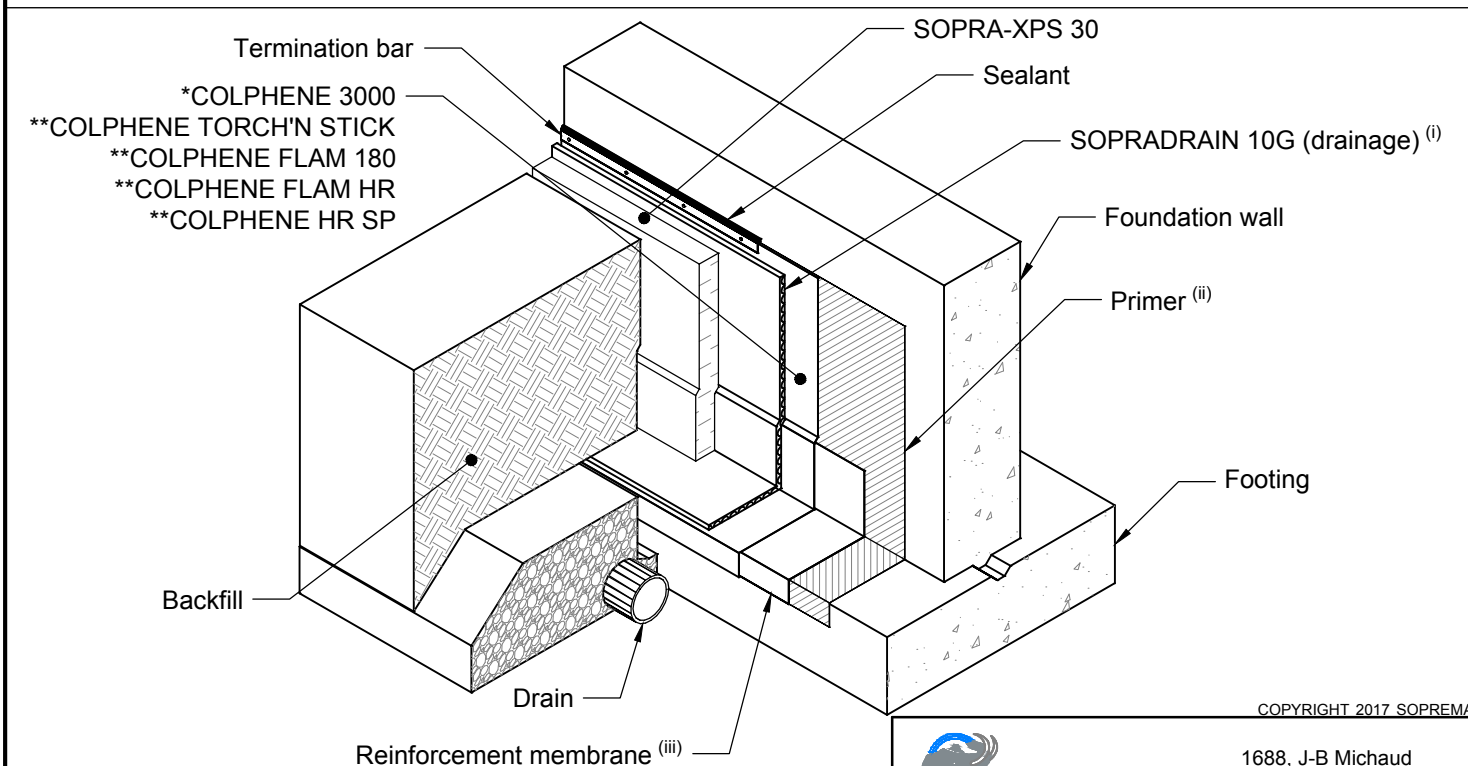


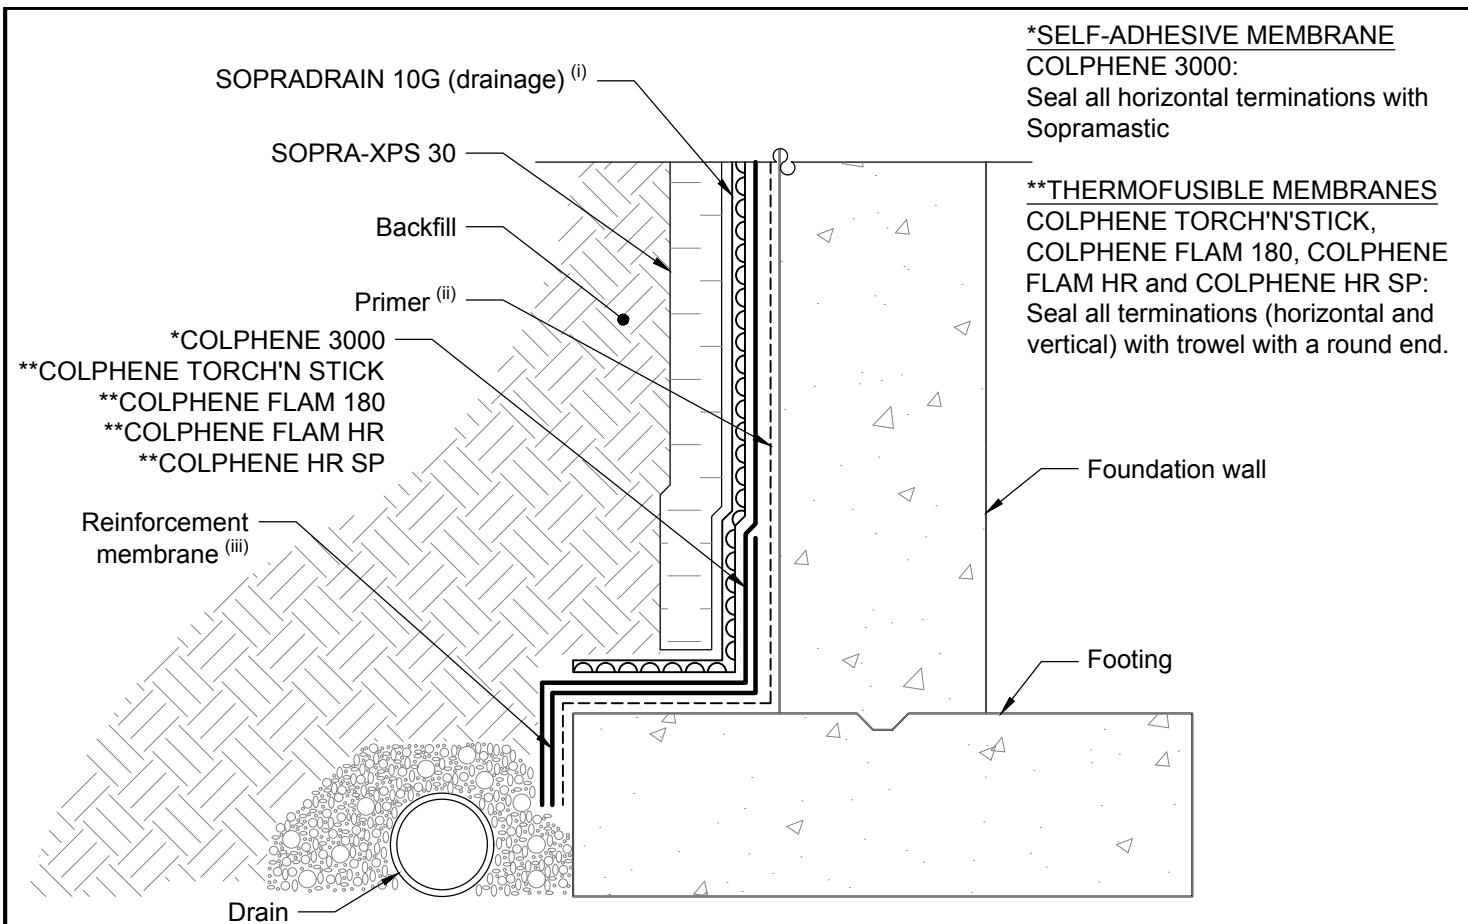

COPYRIGHT 2017 SOPREMA

Note: Do not use anchors to retain protection board or insulation.

(i): Always install SOPRADRAIN filter fabric towards backfill and on to footing.

(ii): Use SOPRASEAL STICK PRIMER with self-adhesive membrane and ELASTOCOL 500 primer with thermofusible membranes.

(iii): Use the membrane installed on the foundation wall for the reinforcement membrane.



SOPREMA

1688, J-B Michaud
Drummondville, QC J2C 8E9
WWW.SOPREMA.CA

TITLE: FOUNDATION WALL AND FOOTING
BELOW GRADE

PROJECT:

DRAWING NUMBER:

SCALE:

N.T.S.

DATE:

AUGUST 2017

BGW01-2