
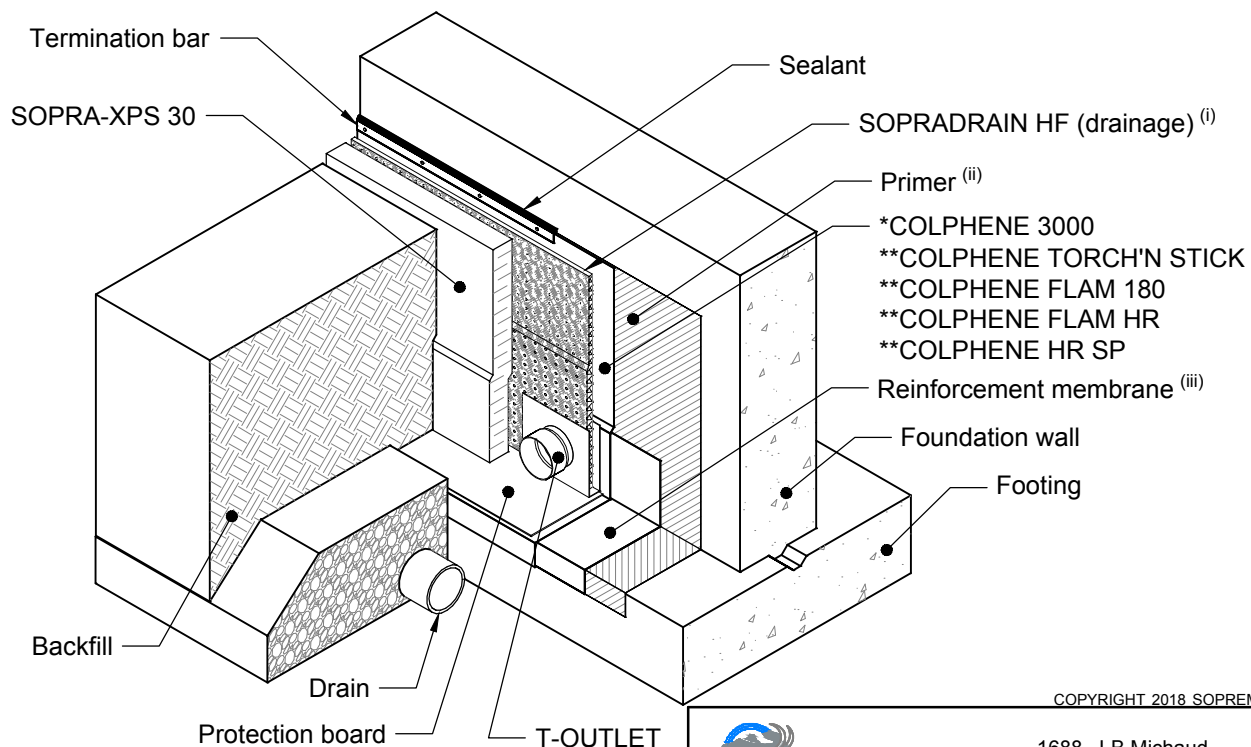


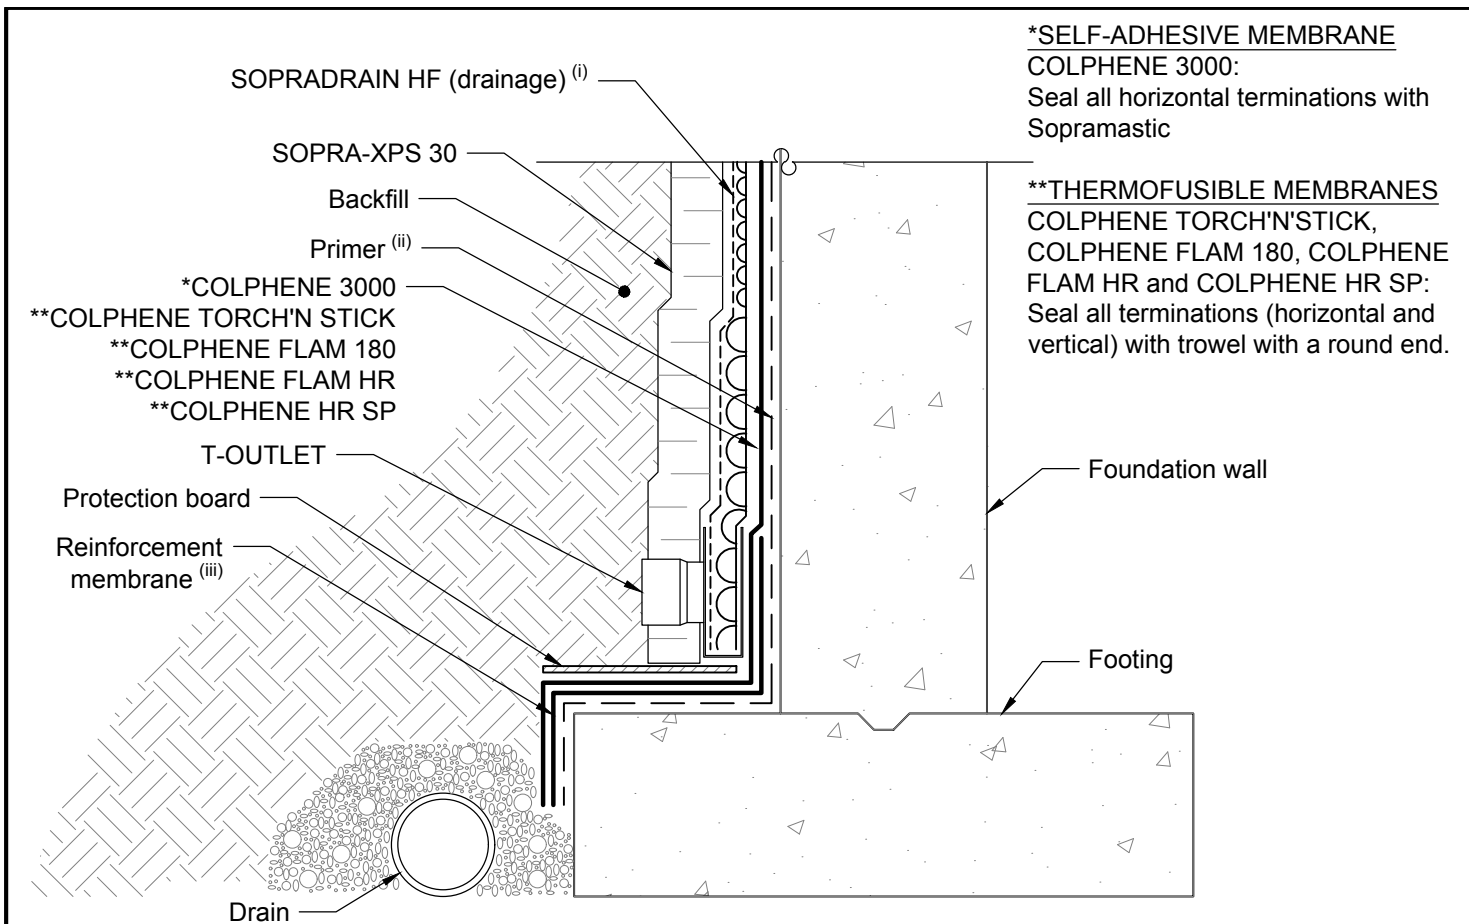

COPYRIGHT 2018 SOPREMA

Note: Do not use anchors to retain protection board or insulation.

(i): Always install SOPRADRAIN filter fabric towards backfill.

(ii): Use SOPRASEAL STICK PRIMER with self-adhesive membrane and ELASTOCOL 500 primer with thermofusible membranes.

(iii): Use the membrane installed on the foundation wall for the reinforcement membrane.



SOPREMA

1688, J-B Michaud
Drummondville, QC J2C 8E9
WWW.SOPREMA.CA

TITLE: CONVENTIONAL FOUNDATION WALL
WITH SOPRADRAIN HF & T-OUTLET

PROJECT:

DRAWING NUMBER:

SCALE:

N.T.S.

DATE:

JUNE 2018

BGW25