




ACCESSORY  
PRODUCTS

# SOPRATAACK

## ROOFS



### ULTRA-FAST CURING ADHESIVE FOR MEMBRANES

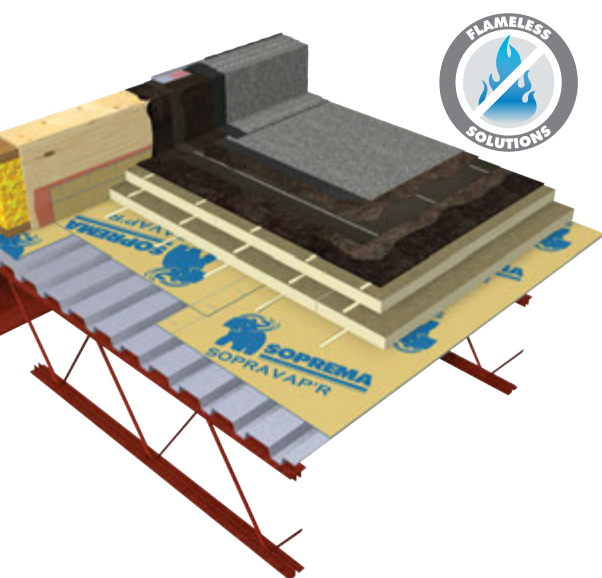

SOPRATAACK is an odour-free, two-component polyurethane adhesive with very low VOC content. It is used to adhere SBS polymer modified bitumen membranes on low-slope surfaces.

Perfect product for projects that restrict solvent use and odours, such as in hospitals and schools.

- Fully cured in 24 hours
- Odour free
- Excellent adhesion

### SURFACE PREPARATION

The surface must be clean, dry, and free of oil, grease, dirt, or debris.

### COMPLEMENTARY PRODUCTS

#### SOPRATAACK FLASHING

Use to adhere SBS polymer modified bitumen membranes on flashings and slope surfaces > 3 % (3/8 in per ft).

#### SOPRAPLY STICK DUO, SOPRAFLASH STICK and SOPRAFLASH STICK DUO

Covered with SOPRAPLY STICK TRAFFIC CAP membrane can be used on upstands.

#### COLPLY

Perfect membrane for cold-adhered systems.

SOPRATAACK	
SOLID CONTENT	> 99,5 %
CONTAINER	14,7 L (3,9 US gal)
COVERAGE RATE	17 m <sup>2</sup> (180 ft <sup>2</sup> )



SOPREMA.US • 1.800.356.3521

SOPREMA.CA • 1.877.MAMMOUTH

## INSTALLATION INSTRUCTIONS

1



Remove the lid and then remove the metal container, which contains Part A, from the plastic insert.

2



Remove the plastic insert and pour Part A (catalyst) into Part B (resin).


3



Using a low-speed mixer (200 to 400 rpm), thoroughly mix the entire contents of the container for 4 to 5 minutes to obtain a homogeneous consistency.

Note : Coat the surface with adhesive at a rate of 0.9 L/m<sup>2</sup> (2.25 US gal/100 ft<sup>2</sup>) with a thickness of 36 mil. Coverage rate may vary depending on the substrate condition.

4

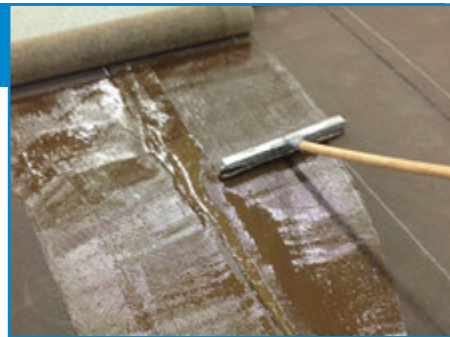

SOPRATACK adhesive is applied using a 4.8 mm (3/16 in) neoprene notched squeegee.

If you have any questions about this product or its installation, please contact your SOPREMA representative.

