


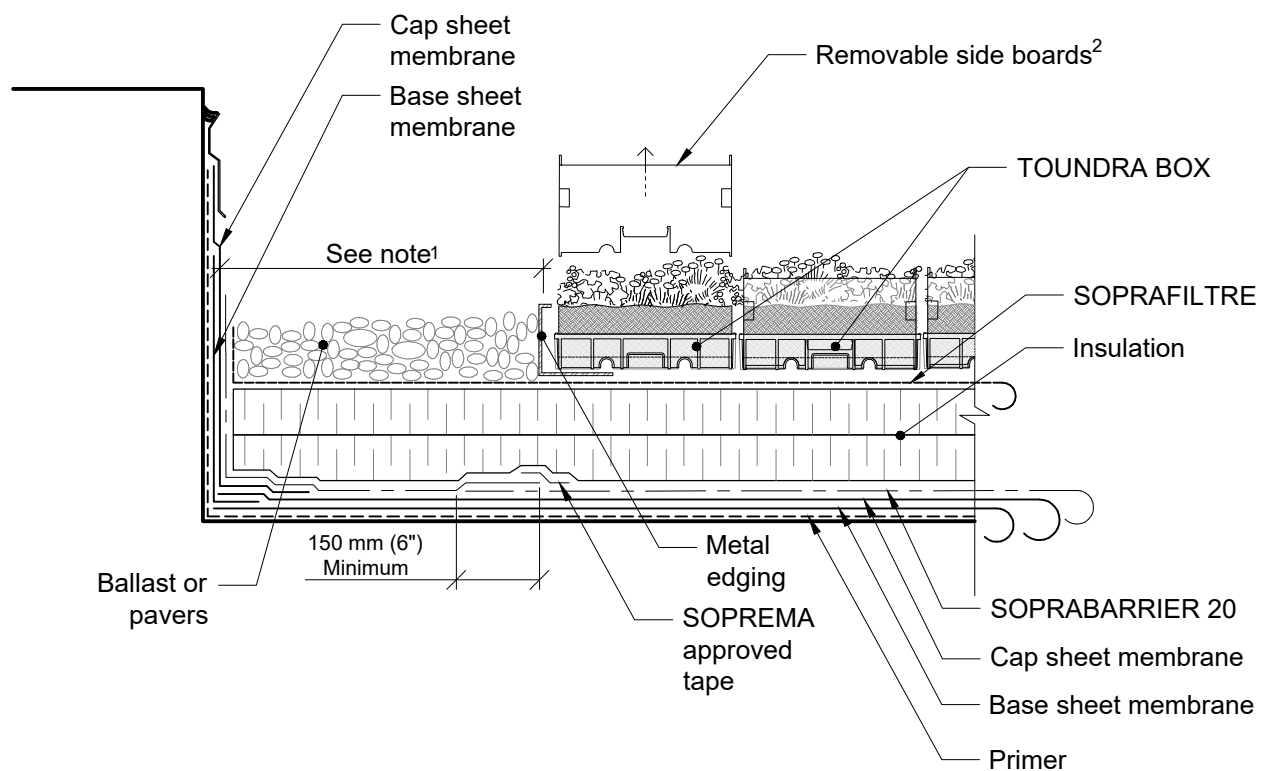

Note 1 : Provide vegetation-free zone at the base of upstands, around drains and roof projections as per applicable standards.

Note 2 : The side boards must be removed once the TOUNDRA BOX are installed

COPYRIGHT 2020 SOPREMA

Title : PARAPET DETAIL - TOUNDRA BOX - INVERTED ROOF

Scale:
N.T.S.

Date:
SEPT. 2020

Drawing number:
SOP213-01