



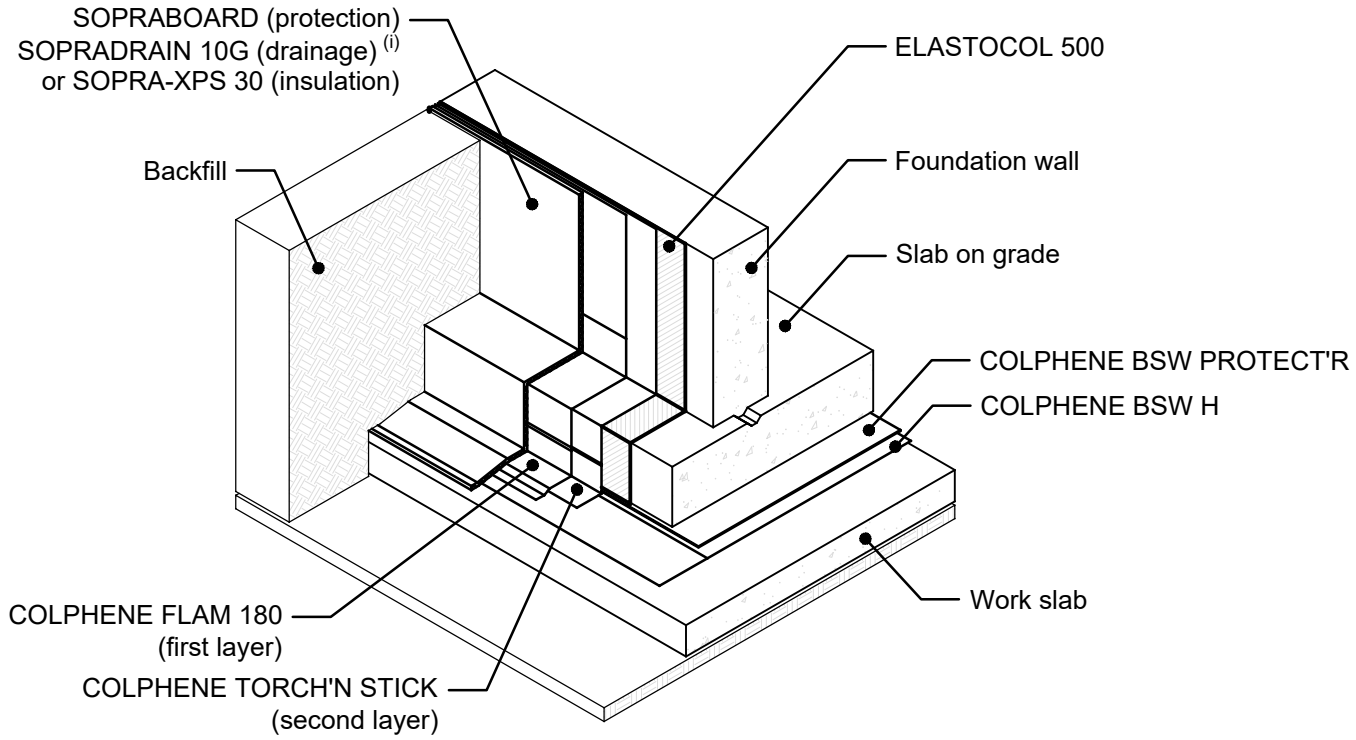

\* Heat-welded membranes:  
COLPHENE TORCH'N STICK  
Seal all terminations (horizontal and vertical)  
with trowel with a round end.

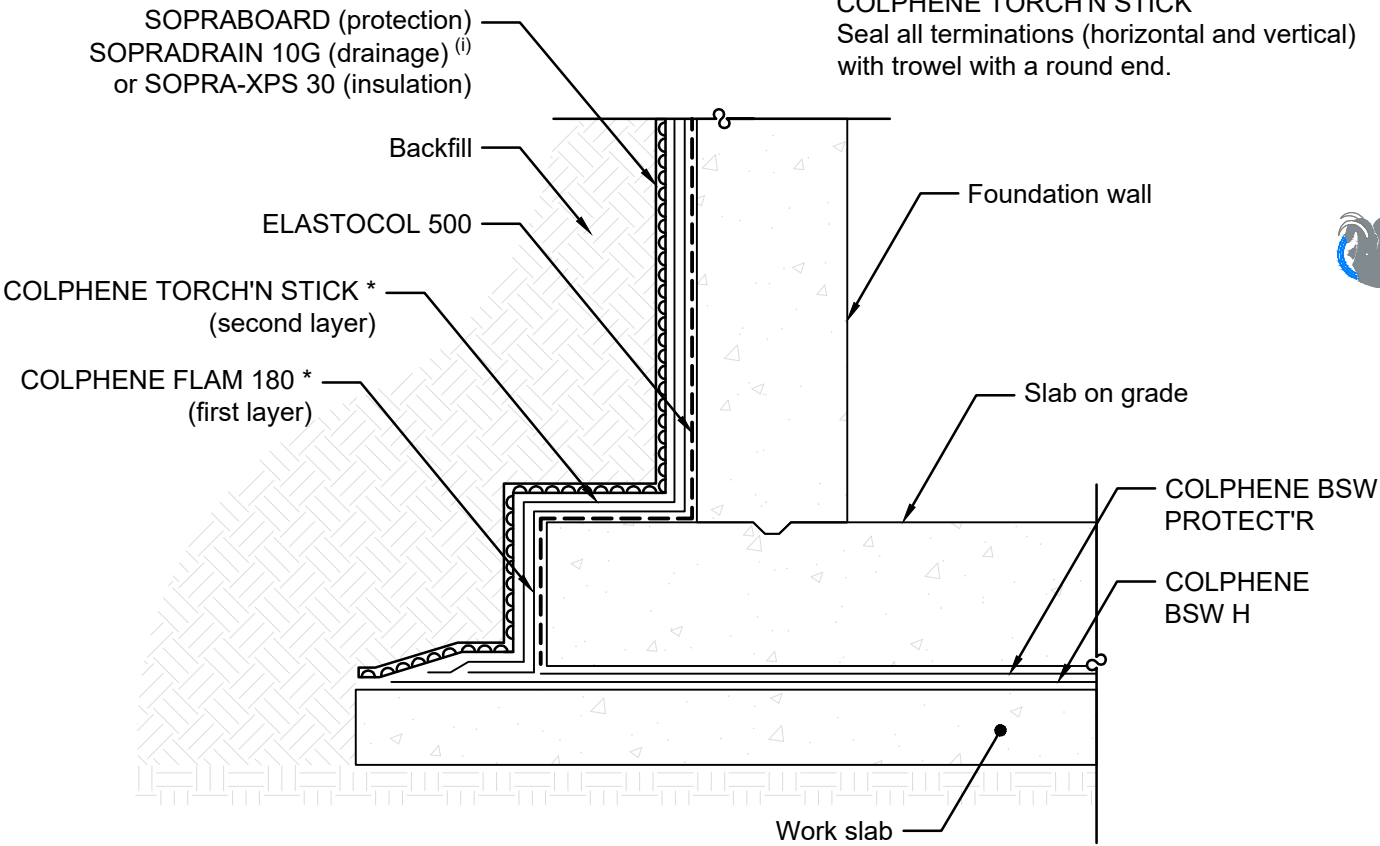

Note: Do not use anchors to retain protection board or insulation.  
(i): Always install Sopradrain filter fabric towards backfill and on to footing.

COPYRIGHT 2017 SOPREMA

Title:  
FOUNDATION - SLAB ON GRADE - BELOW WATER TABLE

Scale: N.T.S.	Date: December 2017	Drawing number: SOP402-07
------------------	------------------------	------------------------------