

TECHNICAL BULLETIN

NO.: 021RTB

DATE ISSUED: June 5, 2023

REPLACES: N/A


TERRITORY: CAN&US

Subject: Installation of SEMI-RIGID ASPHALTIC PANELS – SOPRABOARD

The installation instructions for the SOPRABOARD panel from Soprema provided in Soprema's technical data sheet apply at all times, with the exception of roofs not regulated by CSA A123.21 and FM 4470 standards. In cases where these standards do not apply, the following instructions can be applied:

The substrate must be clean, dry and free of dust, grease or other contaminants.

1. Install SOPRABOARD on the roof deck making sure to put the darker side up and staggering the vertical joints.
2. Fasten panels using 25 mm (1 in) wide cap nails or wide head nails placed every 400mm (16 in) or according to the following pattern.

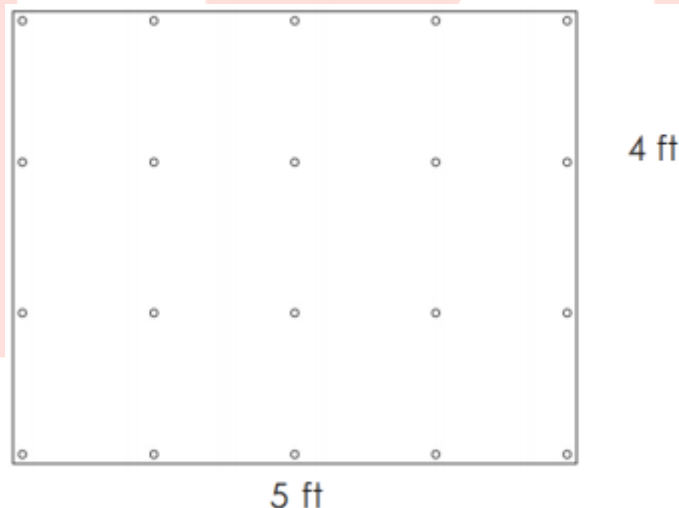

TECHNICAL BULLETIN

NO.: 021RTB

DATE ISSUED: June 5, 2023

REPLACES: N/A

TERRITORY: CAN&US

Note : The SOPRABOARD panels are easily cut with a knife. Ensure to prime the panel using RESISTO EXTERIOR PRIMER prior application of the membranes.

Do not apply directly onto soft wood planks.

- END OF TECHNICAL BULLETIN -

