
### RESISTO

# ROOF UNDERLAYMENT - HIGH TEMPERATURE

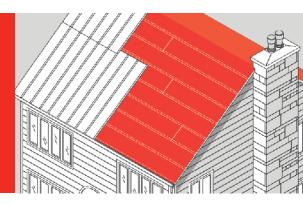

#### **LASTOBOND PRO LT**

**High performance self-adhesive underlayment for metal roofs**, or as a perimeter membrane under one-ply roofing system and asphalt shingles. It is designed to withstand temperature variations from -45  $^{\circ}$  C to 90  $^{\circ}$  C (-49  $^{\circ}$ F to 194  $^{\circ}$ F) and for applications as low as -10  $^{\circ}$ C (14  $^{\circ}$ F).

- Excellent resistance to temperature variations
- Easy Installation
- UV resistant; 90-day exposure

#### **PRODUCT PURPOSE**

Application	Wateproofing		
Building Part	Roofing		
Types of slope	Outside steep slope	Outside low slope	
Type of covering	Metal roofing	Asphalt shingles	
	Bitumen membrane		
Substrates	Plywood	Asphaltic panel	
	OSB	Gypsum	

#### PRODUCT CHARACTERISTICS

Technology	SBS modified bitumen
Surface	Trilaminate woven polyethylene
Underface	Two parts silicone release film (split-back)
Installation Method	Self-adhesive
Operating temperature	-45 °C to 90 °C (-49 ° F to 194 °F)
Maximum exposure	90 days

#### **PACKAGING**

Code	Width		Length		I I DIIOKDESS		Selvedge Width	Net Area				Quantity
	m	in	m	in	mm	mil	mm	m²	ft <sup>2</sup>	m²	ft <sup>2</sup>	(per pallet)
10104	0.91	36	20	65.6	1.0	40	75	16.6	178.75	18.2	195	36

#### **PROPERTIES**

Properties	STANDARDS	LASTOBOND PRO LT
Thickness	-	1.0 mm (40 mils)
Roll Weight	-	20 kg (44 lbs)
Breaking Strength, MD / XD	ASTM D1970	11 / 12 kN/m (63 / 68 lbf/in)
Elongation at break, MD / XD	ASTM D1970	30 / 20%
Tear Resistance, MD / XD	ASTM D1970	375 / 400 N (84 / 90 lbf)
Static Puncture	ASTM D5602	400 N (90 lbf)
Adhesion to plywood, 4,5 $^{\circ}$ C (40 $^{\circ}$ F)	ASTM D1970	12 kgf/30.5 cm (26 lbf/ft)
Adhesion to plywood, 24 °C (75 °F)	ASTM D1970	31 kgf/30.5 cm (68 lbf/ft)
Low Temperature Flexibility	ASTM D1970	Pass at -30 °C (-22 °F)
Water vapour permeance	ASTM E96 (Procedure B)	< 2.1 ng/Pa.s.m <sup>2</sup> (< 0.037 perm)
Nail Sealability	ASTM D1970	Pass

## **RESISTO**

## LASTOBOND PRO LT

#### **INSTALLATION**

Storage	Rolls should be stored upright, tape side up. If the products are stored outdoors, cover them with an opaque protective cover after removing the delivery packaging.  Can withstand freezing but must be reactivated to at least 10 ° C (50 ° F) before installation.			
Application temperatures	-10 °C (14 °F) to 10 °C (50 °F). For installa HT-N membrane.	cion over 10 °C (50 °F), RESISTO recommand to use the LASTOBOND PRO		
Complementary Products	EXTERIOR PRIMER	<b>OR</b> H <sub>2</sub> O PRIMER		
Tools Required	Knife	Smoothing roller		
	Tape measure			

of installation. However, primer is mandatory when membrane is used as underlayment in a RESISTO single ply roofing system.  1. If conditions require, prepare the substrate with EXTERIOR PRIMER. 2. Position the membrane parallel to the roof edge while leaving about 8 cm (3.2 in) at the front where the gutter will be installed. 3. Fold back on itself, by half of its width, or 50 cm (20 in) over the whole length already positioned. It is recommended to kneel on the unfolded portion of the membrane to keep it in place during this operation. 4. Remove the protective film from the folded section while placing the membrane on the support. The seadhesive portion then adheres to the support. 5. Then take the other side of the membrane and repeat the previous two steps.	Surface Preparation	The substrate must be clean, dry and free of dust, grease or other contaminants.
<ol> <li>Position the membrane parallel to the roof edge while leaving about 8 cm (3.2 in) at the front where the gutter will be installed.</li> <li>Fold back on itself, by half of its width, or 50 cm (20 in) over the whole length already positioned. It is recommended to kneel on the unfolded portion of the membrane to keep it in place during this operation.</li> <li>Remove the protective film from the folded section while placing the membrane on the support. The seathers adhesive portion then adheres to the support.</li> <li>Then take the other side of the membrane and repeat the previous two steps.</li> <li>Immediately apply pressure on the membrane using a heavy metal roller or a hard rubber roller to ensurable adhesion between the support and the membrane and avoid forming bulges, folds or gaps.</li> </ol>	Installation Prerequisite	The use of EXTERIOR PRIMER is not required on most surfaces when the membrane is covered within 24 hours of installation. However, primer is mandatory when membrane is used as underlayment in a RESISTO single-ply roofing system.
Refer to ROOF SYSTEM INSTALL ATION for waterproofing membrane installation to roof details and unstan	Installation	<ol> <li>Position the membrane parallel to the roof edge while leaving about 8 cm (3.2 in) at the front where the gutter will be installed.</li> <li>Fold back on itself, by half of its width, or 50 cm (20 in) over the whole length already positioned. It is recommended to kneel on the unfolded portion of the membrane to keep it in place during this operation.</li> <li>Remove the protective film from the folded section while placing the membrane on the support. The sefadhesive portion then adheres to the support.</li> <li>Then take the other side of the membrane and repeat the previous two steps.</li> <li>Immediately apply pressure on the membrane using a heavy metal roller or a hard rubber roller to ensure adhesion between the support and the membrane and avoid forming bulges, folds or gaps.</li> </ol>

For product evaluation, see NER-SOP-003.R2





chloride.





It is not recommended to use a product containing bitumen directly on softwood boards or flexible polyvinyl

