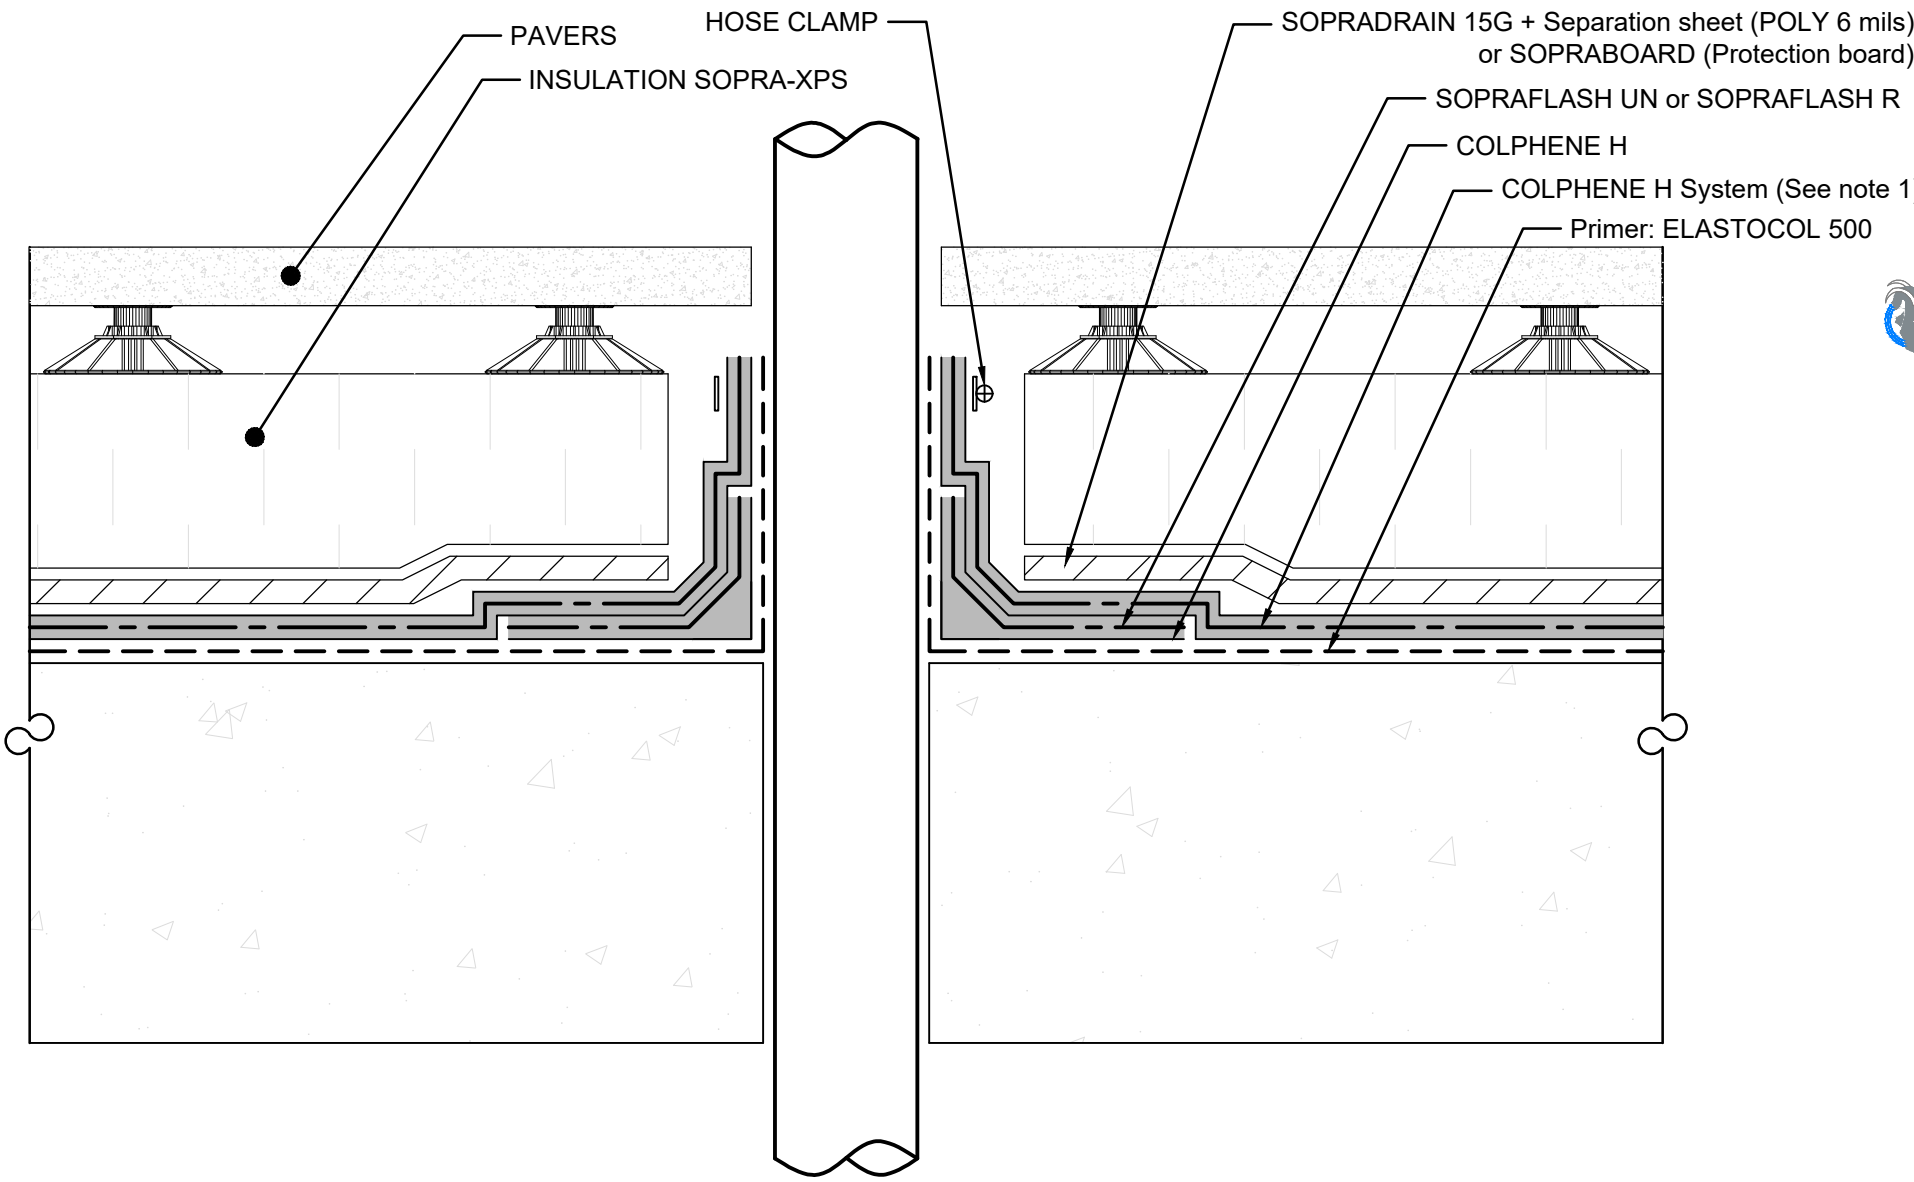

NOTE 1: COLPHENE H SYSTEM
Apply the base coat of COLPHENE H at a minimum thickness of 2.3 mm (90 mils) to the substrate. Immediately unroll the reinforcing fabric (SOPRAFLASH R) with a 75 mm (3 in) overlap of adjacent sheets into the base coat of COLPHENE H while in hot liquid state. Apply the top coat of COLPHENE H at a minimum rate of 3.2 mm (125 mils) over the reinforcing fabric.

COPYRIGHT 2018 SOPREMA

1688, J-B Michaud Drummondvile, QC J2C 8E5 WWW.SOPREMA.CA

Title:

PLAZA DECK - INSULATED - COLPHENE H - PENETRATION

Scale:	Date:	Drawing number:
N.T.S.	May 2018	SOP507-01