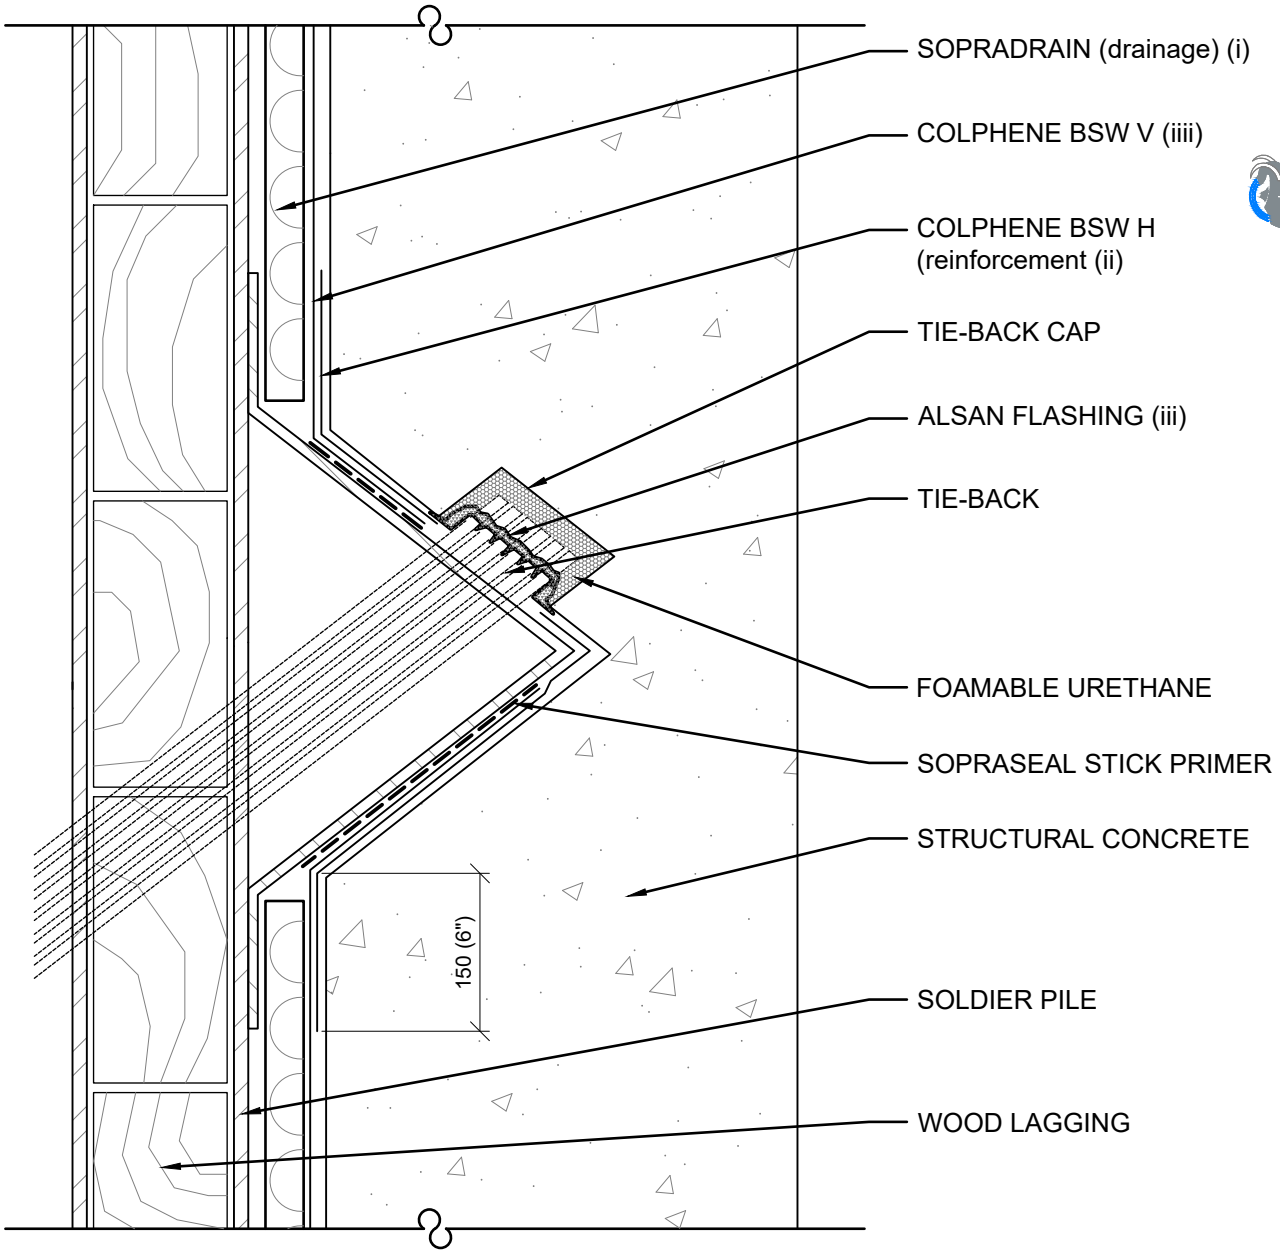

(i): Always install Sopradrain 10-G, 15-G or 18-G filter fabric towards wood lagging.
Primer is recommended over drainage board for application below 10°C.

(ii): Colphene BSW V reinforcement installed over primed surface and all edges sealed is an acceptable alternative to Colphene BSW H reinforcement.

(iii): Sopramastic is an acceptable alternative for application below 5°C only.

(iiii): Primer + Colphene BSW Protect'R are required over Colphene BSW V for application under high water table level mark / high hydrostatic head.

COPYRIGHT 2017 SOPREMA

1688, J-B Michaud Drummondvile, QC J2C 8E5 WWW.SOPREMA.CA

Title:

Blindside Waterproofing - Tie-Back (Bundle)

Scale:	Date:	Drawing number:
N.T.S.	May 2017	SOP418-04